



Sony Cyber-shot DSC-S2100 LCD Replacement

This is a straight forward repair with no hidden screws or cables. The repair should take no longer than 15 minutes, Replacement LCD's are available for under USD \$20.

Written By: oldturkey03



INTRODUCTION

Here is a straight forward repair of broken LCD.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [Replacement LCD](#) (1)
-

Step 1 — LCD

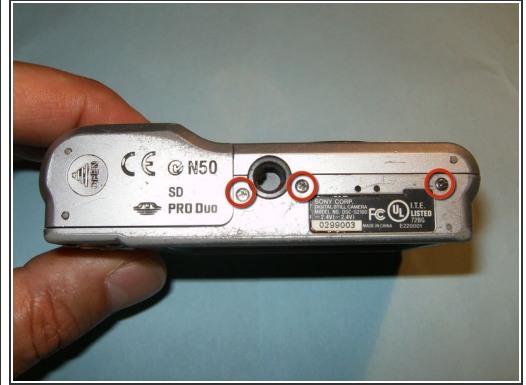


- The broken LCD is immediately visible when the camera is turned on.
- Remove the batteries and, if so equipped, the memory card.
- Remove the three Philips screws from the bottom.

Step 2

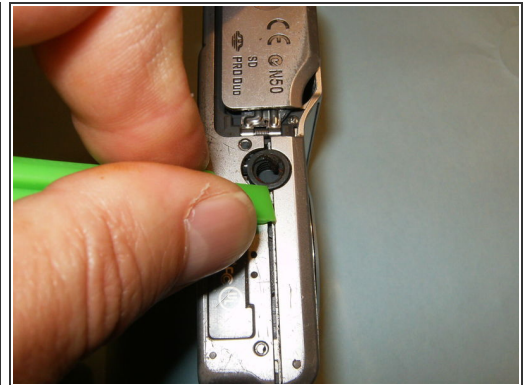

- Remove the two Philips screws from the right
- Remove the two Philips screws from the left
- Split the housing by either using a plastic opening tool, or your finger nails. No excessive force is necessary. For ease of accomplishment, start at the battery compartment.

Step 3

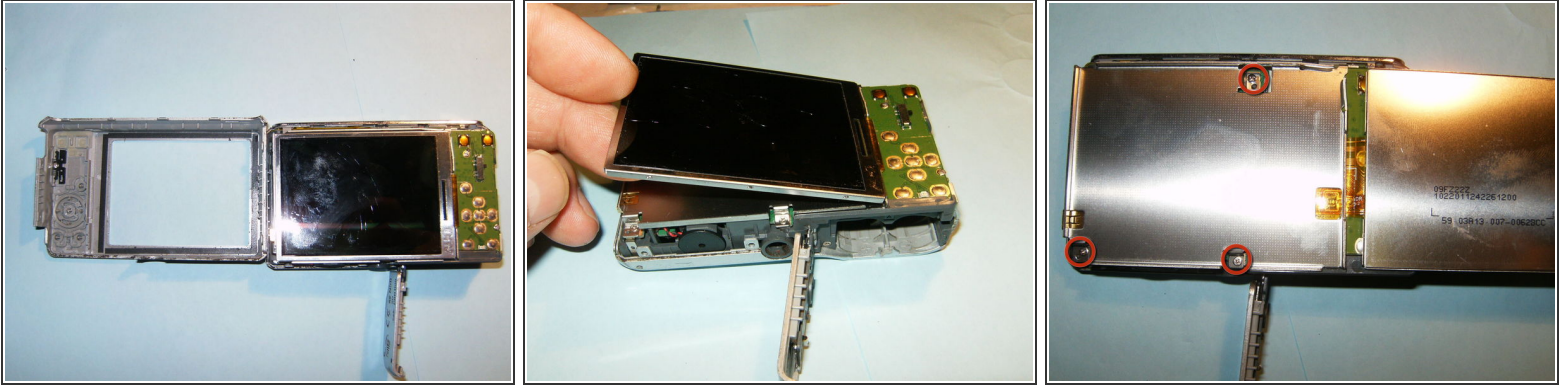

- Once the rear case is off, the LCD and frame are easily identified.
- Fold the LCD to the right, out of the frame.
- ⚠ Do not try to remove it yet since the ribbon cable is still connected.
- Remove the three Philips screws of the LCD frame.

Step 4



- With the LCD frame removed, the ribbon cable becomes clearly visible.
- Flip the LCD to the left side. Open the clip of the connector by moving the black lock to the right.
- Remove the LCD

Step 5



- Hopefully, this is the screen that greets you, once you reassembled your camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 05:25:46 PM.